



OSD LANGUAGE SELECTION

Selecting the OSD language type on the Media Player

1. Turn on the Yur.Media Box and the TV

2. Press "Setup" on the Remote Control

3. Scroll to the "Set Preferences" option and press ENTER on the Remote Control

4. Scroll to the "OSD Language" and press ENTER on the Remote Control

5. On the right popup box, you can see the list of languages available.

6. Scroll to the language of choice and press ENTER on the Remote Control

7. The OSD language will change immediately

8. Scroll to the Main Page option and exit SETUP menu by pressing "Setup" button

on the Remote Control.

