

# Colour Television

## Owner's Manual



### LC-37IE22

Please read this manual carefully before operating your set.  
Retain it for future reference.

See the label attached on the back cover and quote this information to your dealer when you require service.

**create >> excite >> inspire**  
**[www.yuraku.com.sg](http://www.yuraku.com.sg)**

# Contents

<b>Installation</b>	<b>3</b>	<b>Sound adjustment</b>	<b>23-25</b>
<b>Remote control handset</b>	<b>4-5</b>	SSM (Sound Status Memory)	23
Controls	4	Balance	24
Battery installation	5	AVL (Auto Volume Leveler)	24
		Stereo/Dual/NICAM reception	25
<b>Controls of</b>		<b>Time Menu</b>	<b>26-28</b>
Front panel	6	Clock	26
		On/Off Time	27
<b>Connections of</b>		Auto sleep / Sleep timer	28
Back panel	7		
<b>Connection to</b>		<b>Connection of PC</b>	
External equipment	8-12	PC Setup	29
		WXGA (or VGA (Only RGB/HDMI mode))	29
<b>Basic operation</b>		<b>PIP (Picture-In-Picture) Feature</b>	<b>30-31</b>
On and Off	13	Watching PIP	30
Programme selection	13	PIP Audio input	30
Volume adjustment	13	Moving the PIP	30
On screen language selection	13	Swapping the PIP	31
		Selecting a Input Signal Source for the PIP	31
<b>On screen menus</b>		Programme selection for sub picture	31
Menu selection	14	Programme scan	31
<b>Setting up TV stations</b>	<b>15-19</b>	<b>Teletext (option)</b>	<b>32-33</b>
Auto programme tuning	15		
Manual programme tuning	16-17	<b>Displayable Monitor Specification</b>	<b>34</b>
Programme edit	18-19		
Calling the programme table	19	<b>Troubleshooting</b>	
		Check list	35
<b>Picture adjustment</b>	<b>20-22</b>		
CSM (Colour Status Memory)	20		
PSM (Picture Status Memory)	21		
Manual Picture Control	21		
Picture Format	22		

# Installation

## Power

This set operates on an AC mains supply, the voltage is as indicated on the label on the back cover. Never apply DC power to the set. In the event of thunderstorms or power-cuts, please pull out the aerial and mains plugs.

## Warning

To prevent fire or shock hazard, do not expose the set to rain or moisture. Do not rub or strike the Active Matrix LCD with anything hard as this may scratch, mar, or damage the Active Matrix LCD permanently.

## Service

Never remove the back cover of the set as this can expose you to very high voltage and other hazards. If the set does not operate properly, unplug it and call your dealer.

## Aerial

Connect the aerial cable to the socket marked  $75\ \Omega$  on the back cover. For the best reception an outdoor aerial should be used.

## Location

Position your set so that no bright light or sunlight falls directly onto the screen. Care should be taken not to expose the set to any unnecessary vibration, moisture, dust or heat. Also ensure that the set is placed in a position to allow a free flow of air. Do not cover the ventilation openings on the back cover.

## Cleaning

Unplug the set before cleaning the face of the LCD Screen. Dust the set by wiping the screen and the cabinet with a soft, clean cloth. If the screen requires additional cleaning, use a clean, damp cloth. Do not use liquid cleaners or aerosol cleaners.

 


To preserve the Environment,  
do not rubbish.

# Remote control handset Controls

Before you use the remote control handset, please install the batteries.

- All the functions can be controlled with the remote control handset.
- Some functions can also be adjusted with the buttons on the front panel of the set.

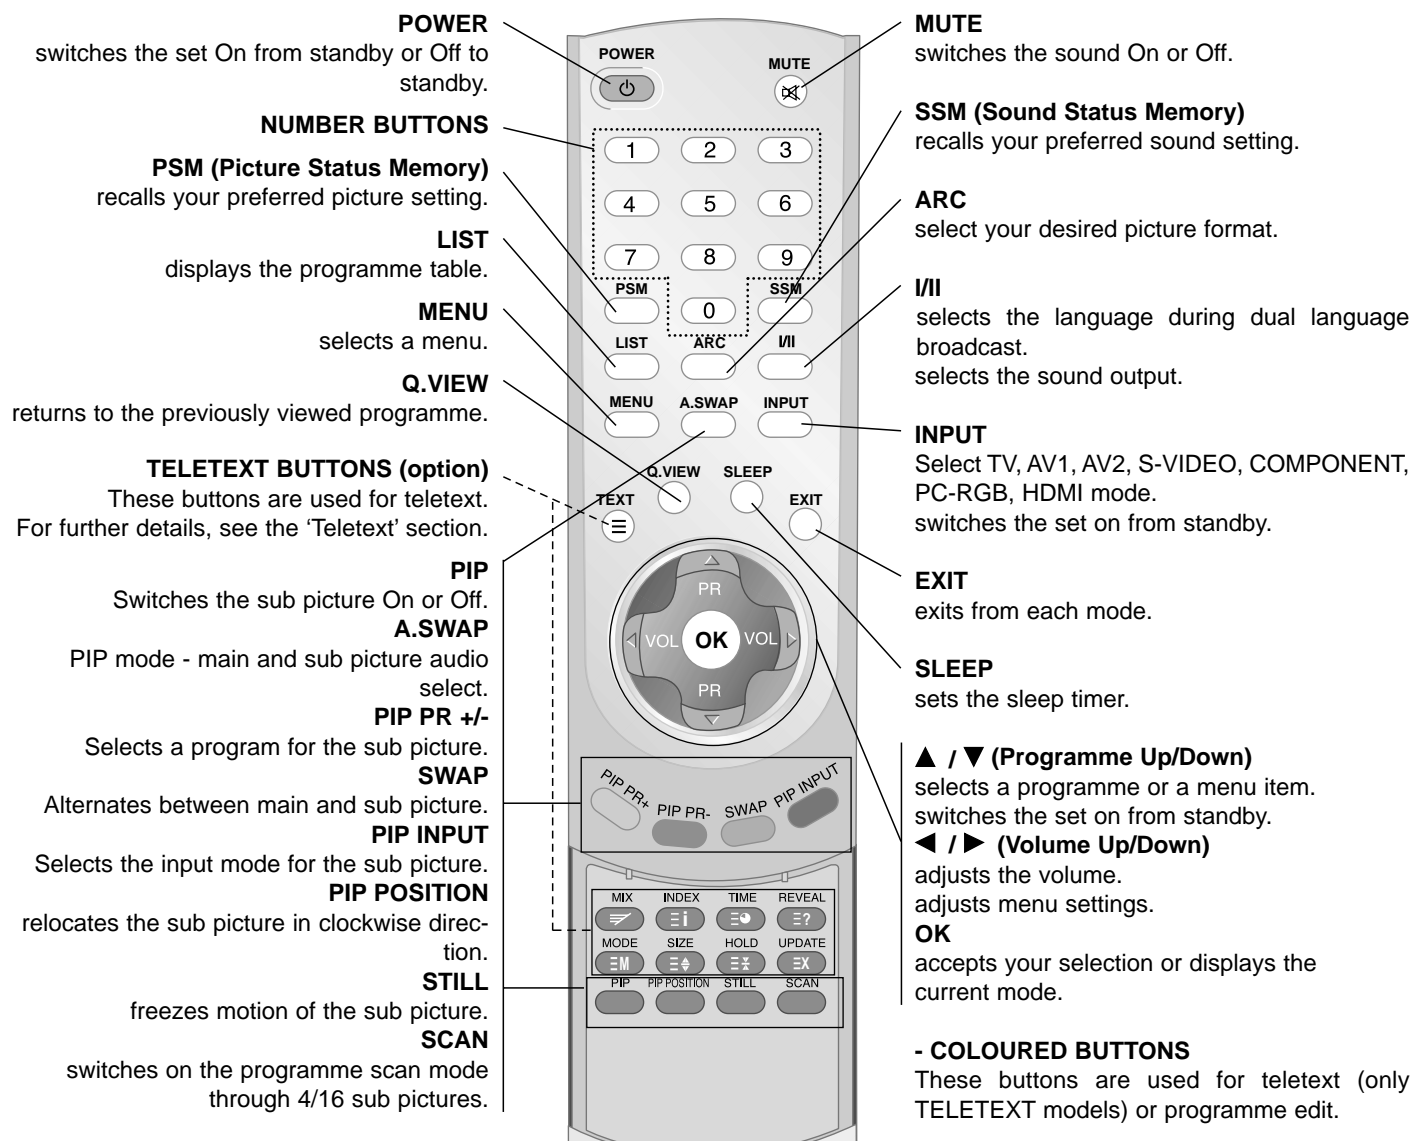


# Remote control handset Battery installation


- Your remote control handset is powered by two AAA type batteries.

**1**

 
To insert batteries, turn the remote control handset over and remove the battery cover.

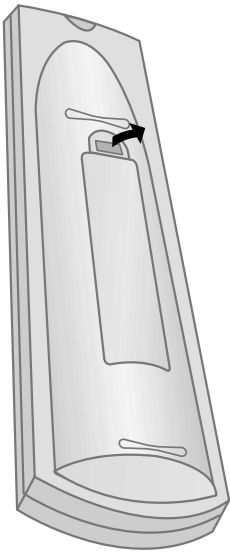**2**

 Put the two batteries into the compartment observing battery polarity.

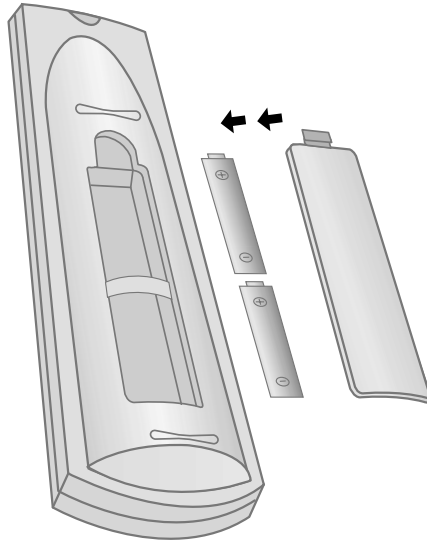**3**

 
Replace the cover.

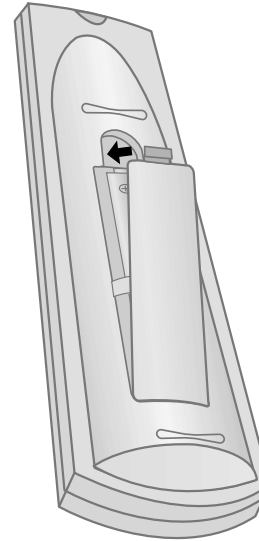

To avoid damage from possible battery leakage, remove the batteries if you do not plan to use the remote control handset for an extended period time. Do not use batteries of differing age or type. Always discard of batteries safely.

# Controls of Front panel

 - Shown is a simplified representation of the set.
- Here shown may be somewhat different from your set.
- This manual explains the features available on the LC-32IE12 series.

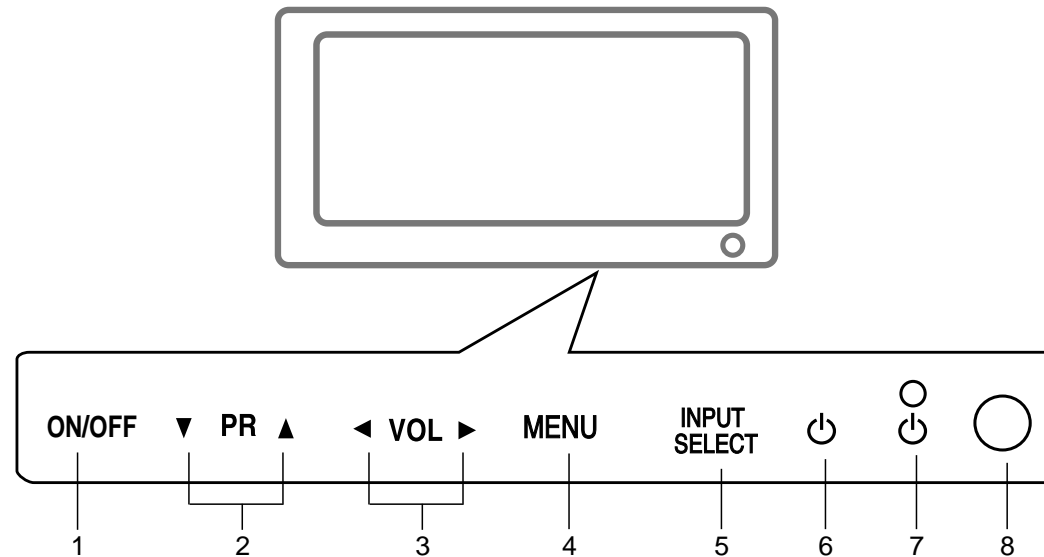

**1. MAIN POWER (ON/OFF)**  
switches the set On or Off.

**2. ▲ / ▼ (Programme Up/Down)**  
selects a programme or a menu item.  
switches the set On from standby.

**3. ◀ / ▶ (Volume Down/Up)**  
adjusts the volume.  
adjusts menu settings.

**4. MENU**  
selects a menu.


**5. INPUT SELECT**  
selects **TV**, **AV1**, **AV2**, **S-VIDEO**, **COMPONENT**, **PC-RGB**, **HDMI** mode.

**6. POWER (⏻)**  
switches the set On from standby or On to standby.

**7. POWER/STANDBY INDICATOR (⏻)**  
illuminates red in standby mode.  
illuminates green when the set is switched On.

**8. REMOTE CONTROL SENSOR**
 
# Connections of Back panel

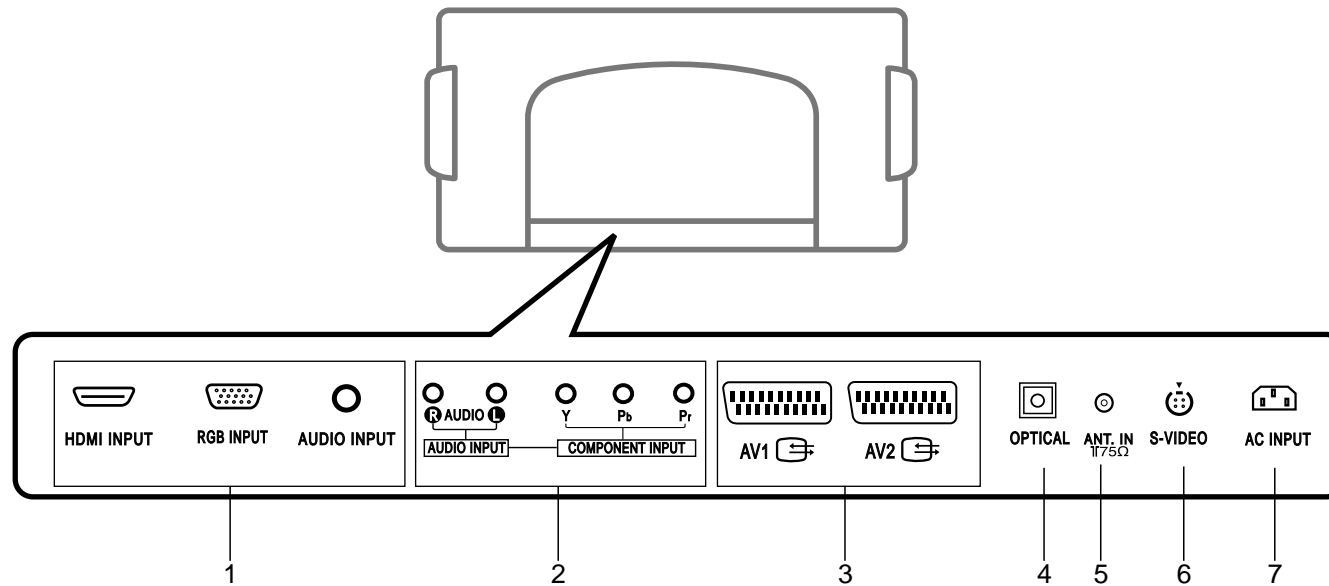

- 1. HDMI INPUT / RGB INPUT / AUDIO INPUT SOCKETS**  
Connect the set output socket of the PERSONAL COMPUTER to this socket.
- 2. AUDIO INPUT / COMPONENT INPUT SOCKETS**
- 3. EURO SCART SOCKET**  
connect the euro scart socket of the VCR to these sockets.
- 4. Digital Audio (OPTICAL)**  
Connect digital audio from various types of equipment.  
**Note :** *In standby mode, these ports will not work.*
- 5. AERIAL SOCKET**


- 6. S-VIDEO INPUT**  
connect video out from an S-VIDEO VCR to the S-VIDEO input.
- 7. POWER CORD SOCKET**  
This set operates on an AC power. The voltage is indicated on the Specifications page. Never attempt to operate the set on DC power.

# Connection to External equipment

 - You can connect additional equipment, such as VCRs, camcorders etc. to your set. However please check with your manufacturers instruction books for specific information. Make sure all connections are made with both your set and additional appliance unplugged from the mains to avoid damaging your equipment. Here shown may be somewhat different from your set.

1

## Connect to Aerial socket

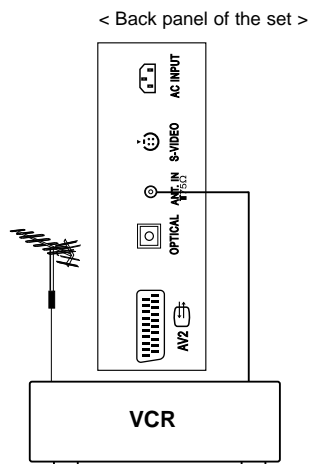

Connect the RF out socket of the VCR to the aerial socket on the back of the set.

Connect the aerial cable to the RF aerial in socket of the VCR.


Store the VCR channel on a desired programme number using the 'Manual programme tuning' section.

Select the programme number where the VCR channel is stored.

Press the **PLAY** button on the VCR.

2

## Watching VCR

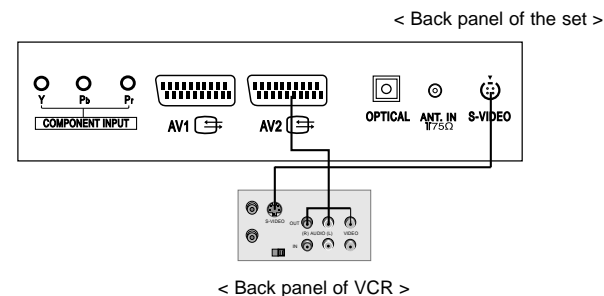 

- If you connect an S-VIDEO VCR to the S-VIDEO input, the picture quality is improved; compared to connecting a regular VCR to the Video input.

- To avoid picture noise (interference), leave an adequate distance between the VCR and set.

Use the **INPUT SELECT** button on the remote control to select **AV1** or **AV2**.

(If connected to S-VIDEO, select the **S-Video** external input source.)


Insert a video tape into the VCR and press the **PLAY** button on the VCR. (See VCR owner's manual)



# Connection to External equipment

 3

## Watching Cable TV

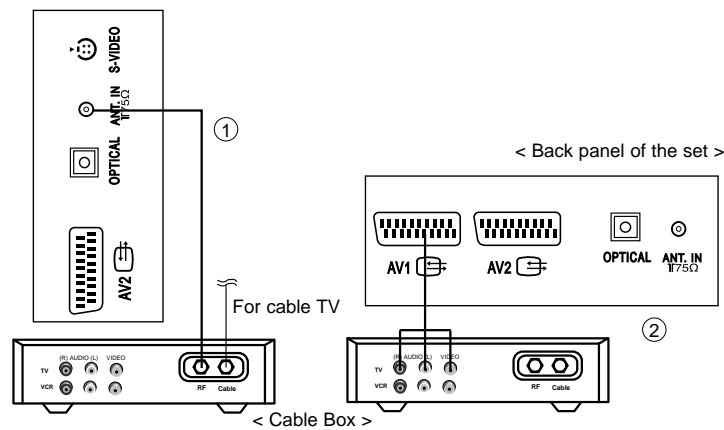

- After subscribing for a local cable TV station and installing a converter you can watch cable TV.
- For further information of cable TV, contact the local cable TV station.

### In using connection 1

Select programme number in programme switch of cable box.  
Match the set programme with selected programme of cable box.  
Select your desired programme with the remote control for cable box.

 
### In using connection 2

Use the **INPUT SELECT** button on the remote control and select **AV1** or **AV2**.

Tune to cable service provided channels using the cable box.

4

## Watching external AV source

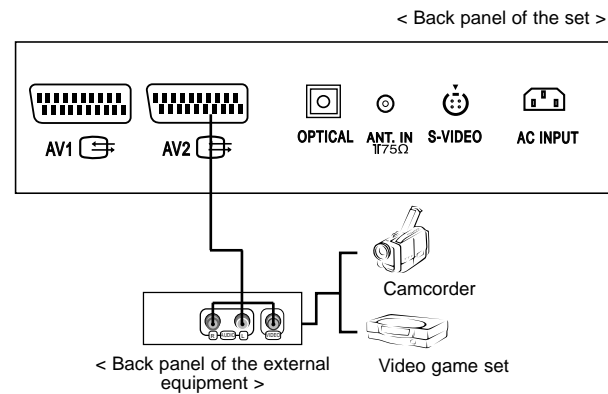


When connecting the set to an external source, match the colours of AUDIO/VIDEO input jacks on the set with the output jacks on the audio/video equipment: Video = yellow, Audio (Left) = white, Audio (Right) = red.

Use the **INPUT SELECT** button on the remote control to select **AV1** or **AV2**.

Operate the corresponding external equipment.  
See external equipment operating guide.

# Connection to External equipment
 
## 5 Watching DVD

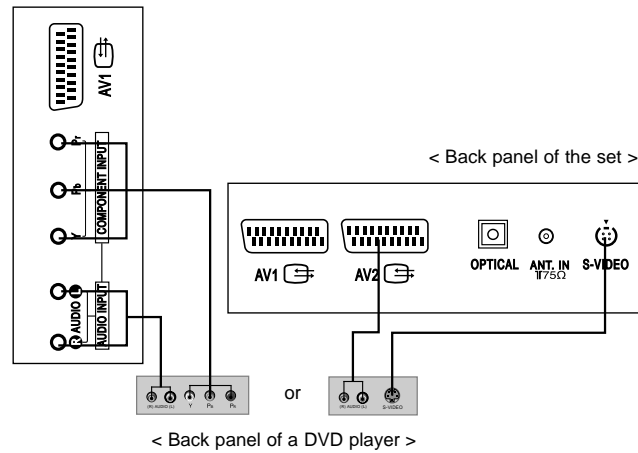

### How to connect

Connect DVD video inputs to Y, PB, PR of COMPONENT (DVD INPUT) and audio inputs to Audio sockets of AUDIO INPUT.

### How to use

Turn on the DVD player, and insert a DVD.

Use **INPUT SELECT** button on the remote control to select **Component**. Refer to the DVD player's manual for operating instructions.

#### • Component Input ports

 
You can get better picture quality if you connect DVD player with component input ports as below.

Component ports of the set	Y	P <sub>B</sub>	P <sub>R</sub>
Video output ports of DVD player	Y	P <sub>b</sub>	P <sub>r</sub>
	Y	B-Y	R-Y
	Y	Cb	Cr
	Y	P <sub>B</sub>	P <sub>R</sub>

# Connection to External equipment

6

## Connecting HDMI (DTV)

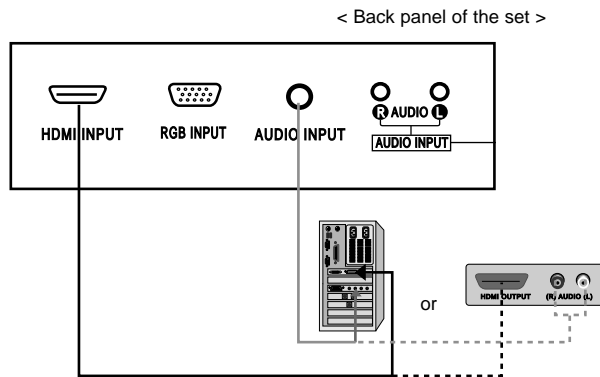

Connect the signal cable from the monitor output socket of the PERSONAL COMPUTER to the **HDMI INPUT** socket of the set.

Connect the audio cable from the PC to the **AUDIO INPUT** sockets of the set.

Press the **INPUT SELECT** button to select **HDMI**.

Switch on the HDMI, and the HDMI screen appears on the set.


**HDMI-DTV input signal** : 480p-60Hz, 576p-50Hz, 720p-50Hz, 720p-60Hz, 1080i-50Hz, 1080i-60Hz.

HDMI Interface with HDCP Copy Protection enables all-digital rendering of video without the losses.

This TV SET can receive the High-Definition Multimedia Interface(HDMI) or Input of Digital Visual Interface(DVI).

# Connection to External equipment
 
## 7 Connecting PC (DTV)

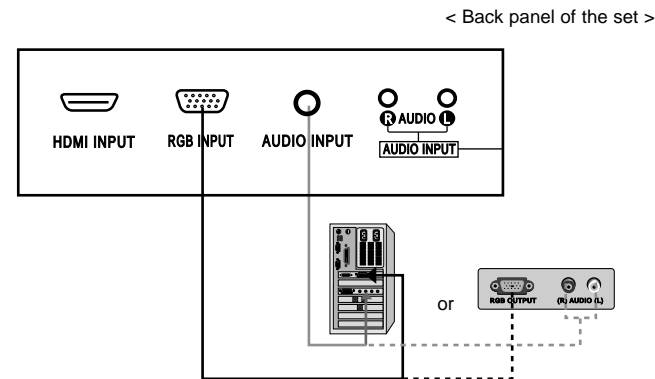

Connect the signal cable from the monitor output socket of the PERSONAL COMPUTER to the **RGB INPUT** socket of the set.

Connect the audio cable from the PC to the **AUDIO INPUT** sockets of the set.


Press the **INPUT SELECT** button to select **PC-RGB**.

Switch on the PC, and the PC screen appears on the set.

The set can be operated as the PC monitor.

**RGB-DTV input signal** : 480p-60Hz, 576p-50Hz, 720p-50Hz, 720p-60Hz, 1080i-50Hz, 1080i-60Hz.

## 8 Connecting Digital Audio

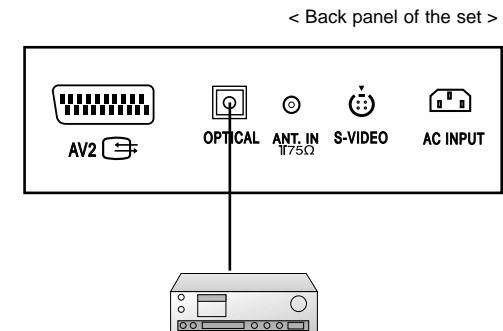 

- Send the set's audio to external audio equipment (stereo system) via the Digital Audio Output (Optical)

**Caution** : Do not look into the optical output port. Looking at the laser beam may damage your vision.

### How to connect

Connect one end of an optical cable to the TV Digital Audio (Optical) Output port.

Connect the other end of the optical cable to the digital audio (optical) input on the audio equipment.

# Basic operation

**1**

## On and Off

Press the main power button to switch the set on.

If the set is in standby mode, press the **POWER**, ▲ / ▼ buttons on the remote control handset to switch it on fully.

Press the **POWER** button on the remote control handset.

The set reverts to standby mode.

Press the main power button again to switch the set off.

**2**

## Programme selection

You can select a programme number with the ▲ / ▼ or **NUMBER** buttons.

**3**

## Volume adjustment

Press the ◀ / ▶ button to adjust the volume.

If you want to switch the sound off, press the **MUTE** button. You can cancel it by pressing the **MUTE**, ◀ / ▶, **SSM** or **I/II** button.

**4**

## On screen language selection

Press the **MENU** button and then use ▲ / ▼ button to select the **SETUP** menu.

Press the ▶ button and then use ▲ / ▼ button to select **Language**.

Press the ▶ button and then use ▲ / ▼ button to select your desired language. All the on screen displays will appear in the selected language.

Repeatedly press the **MENU** button to return to normal TV viewing.

# On screen menus

## Menu selection

- The dialogue between you and your set takes place on screen with an operator menu. The buttons required for the operating steps are also displayed.

**1**

Press the **MENU** button and then use **▲ / ▼** button to display each menu.

**2**

Press the **▶** button and then use **▲ / ▼** button to select a menu item.

 
**3**

Press the **▶** button to display the sub menu or the pull-down menu.

**4**

Change the setting of an item in the sub or pull-down menu with **◀ / ▶** or **▲ / ▼**.

You can move to the higher level menu with **◀** button and to move to the lower level menu press the **▶** button.

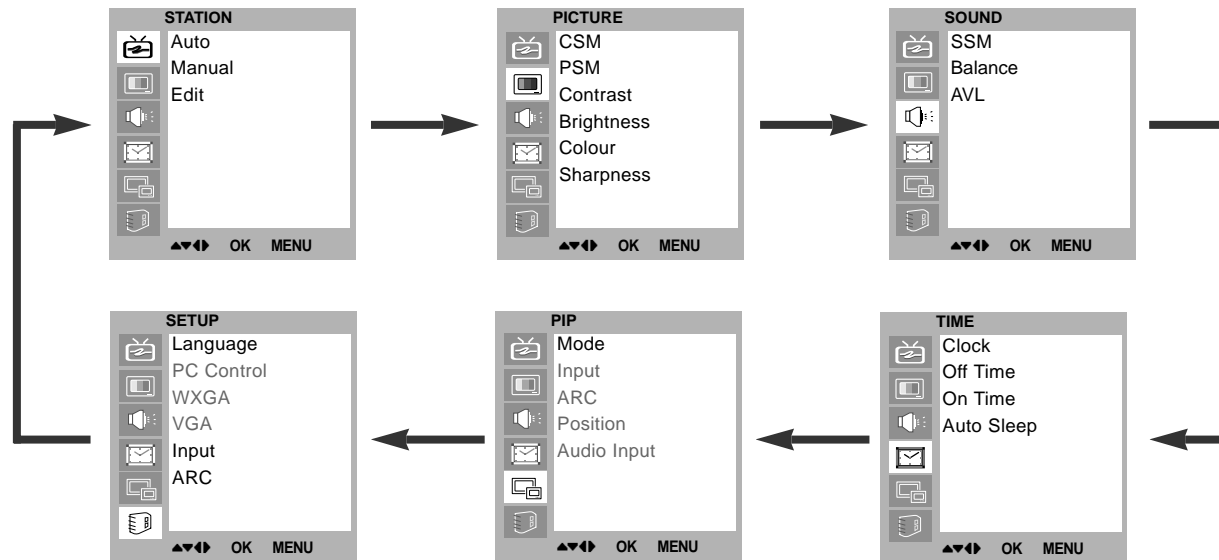

# Setting up TV stations

## Auto programme tuning

- Up to 100 TV stations can be stored by programme numbers (0 to 99). Once you have preset the stations, you will be able to use the **▲ / ▼** or **NUMBER** buttons to scan the stations you programmed. Stations can be tuned using automatic or manual modes.
- All stations that can be received are stored by this method. It is recommended that you use auto programme during installation of this set.

1

Press the **MENU** button and then use **▲ / ▼** button to select the **STATION** menu.

2

Press the **►** button and then use **▲ / ▼** button to select **Auto**.

Press the **►** button to display the **Auto** menu.

Press the **►** button. Select a TV system with the **◀ / ►** button on the **System** pull-down menu;

**L** : SECAM L/L' (France)

**BG** : PAL B/G, SECAM B/G  
(Europe/East Europe)

**I** : PAL I (U.K./Ireland)

**DK** : PAL D/K, SECAM D/K (East Europe)

Press the **▲ / ▼** button to select **Storage From**.

Select the beginning programme number with the **◀ / ►** button on the **Storage From** pull-down menu.

3

Press the **▲ / ▼** button to select **Search**.

 
 
 
Press the **►** button to begin auto programming. All receivable stations are stored.

The station name is stored for stations which broadcast VPS (Video Programme Service), PDC (Programme Delivery Control) or TELE-TEXT data. If no station name can be assigned to a station, the channel number is assigned and stored as **C** (V/UHF 01-69) or **S** (Cable 01-47), followed by a number.

To stop auto programming, press the **MENU** button.

When auto programming is completed, the **Edit** menu appears on the screen. See the 'Programme edit' section to edit the stored programme.

Repeatedly press the **MENU** button to return to normal TV viewing.

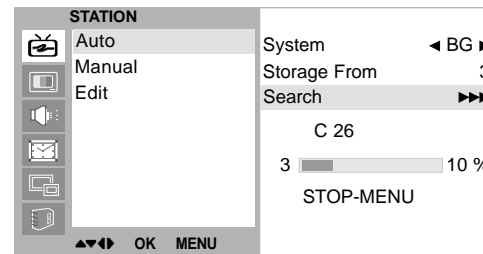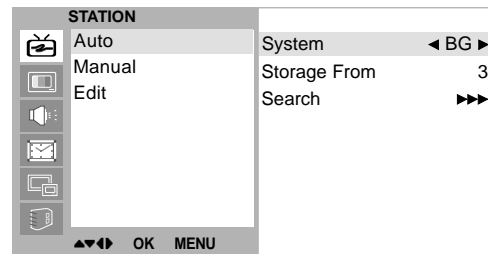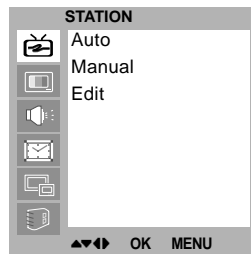

# Setting up TV stations

## Manual programme tuning

- Manual programme lets you manually tune and arrange the stations in whatever order you desire. Also you can assign a station name with five characters to each programme number.

1

Press the **MENU** button and then use **▲ / ▼** button to select the **STATION** menu.

2

Press the **►** button and then use **▲ / ▼** button to select **Manual**.

Press the **►** button to display the **Manual** menu.

Press the **▲ / ▼** button to select **Storage**.

Press the **◀ / ►** button to select the programme number.

3

Press the **▲ / ▼** button to select **System**.

Select a TV system with the **◀ / ►** button on the **System** pull-down menu;

**L** : SECAM L/L' (France)

 
 
 
**BG** : PAL B/G, SECAM B/G  
(Europe/East Europe)

**I** : PAL I (U.K./Ireland)

**DK** : PAL D/K, SECAM D/K (East Europe)

Press the **▲ / ▼** button to select **Channel**.

Press the **◀ / ►** button to select **V/UHF** or **CABLE** on the **Channel** pull-down menu.

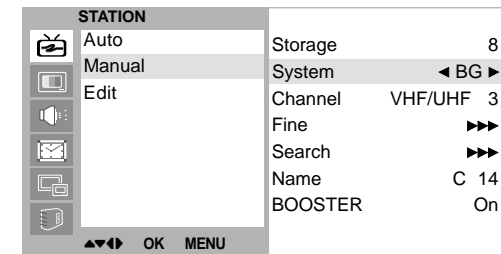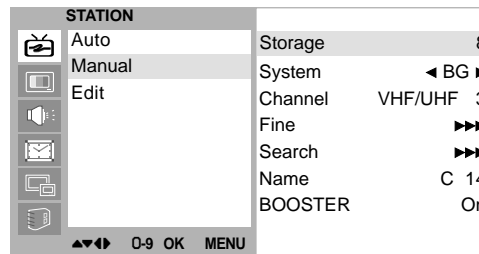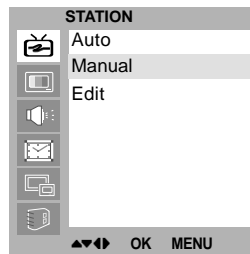



# Setting up TV stations

## Manual programme tuning

4

Normally fine tuning is only necessary if reception is poor.

 
Press the ▲ / ▼ button to select **Fine**.

Press the ◀ / ▶ button to fine tune for the best picture and sound.

Press the ▲ / ▼ button to select **Search**.

Press the ◀ / ▶ button to commence searching on the **Search** pull-down menu. If a station is found the search will stop.

If this station is the one required, press the **OK** button to store it.

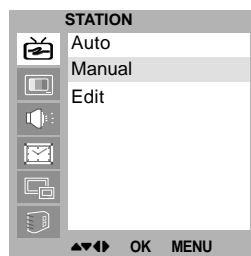

5

Press the ▲ / ▼ button to select **Name**.

Press the ▶ button on the **Name** pull-down menu.

Press the ▲ button. You can use a blank, +, -, the numeric **0** to **9** and the alphabet **A** to **Z**.

With the ▼ button you can select in the opposite direction.

Select the position by pressing the ◀ / ▶ button and then take your choice of the second character, and so on.

Press the **OK** button.

 
 
In some models, **BOOSTER** is an optional function. Only a set with **BOOST-ER** can perform this function.

If the reception is poor at the fringe area of TV signal, select **BOOSTER** to **On**.

Press the ▲ / ▼ button to select **BOOSTER**.

Press the ◀ / ▶ button to select **On** or **Off**.

Repeatedly press the **MENU** button to return to normal TV viewing.

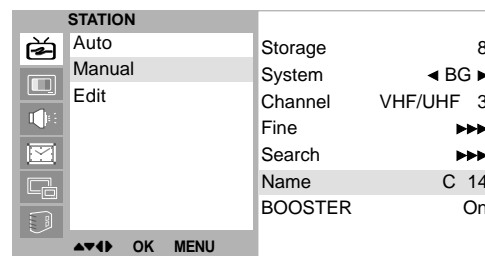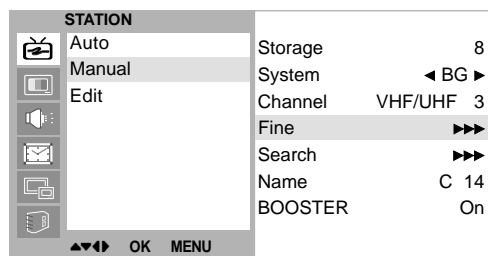

# Setting up TV stations

## Programme edit

 
- This function enables you to delete or skip the stored programmes. Also you can move some stations to other programme numbers or insert a blank station data into the selected programme number.

1

Press the **MENU** button and then use **▲ / ▼** button to select the **STATION** menu.

Press the **▶** button and then use **▲ / ▼** button to select **Edit**.

Press the **▶** button to display the **Edit** menu.

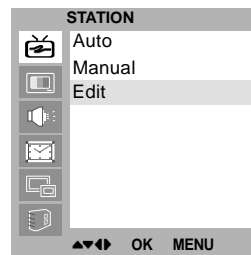

2

### Deleting a programme

Select a programme to be deleted with the **▲ / ▼** or **◀ / ▶** button.

 
Press the **RED** button twice. The selected programme is deleted, all the following programmes are shifted up one position.

3

### Copying a programme

Select a programme to be copied with the **▲ / ▼** or **◀ / ▶** button.

Press the **GREEN** button. All the following programmes are shifted down one position.

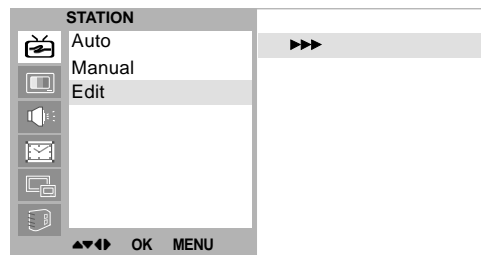

4

### Moving a programme

Select a programme to be moved with the **▲ / ▼** or **◀ / ▶** button.

Press the **YELLOW** button.

Move the programme to the desired programme number with the **▲ / ▼** or **◀ / ▶** button.

Press the **YELLOW** button again to release this function.

0	C	04	5	----
1	S	03	6	----
2	S	04	7	----
3	C	06	8	----
4	C	33	9	----

● Delete	● Copy
● Move	● Skip

# Setting up TV stations

## Programme edit

### Calling the programme table

- You can check the programmes stored in the memory by displaying the programme table.

**5**

#### Skipping a programme number

Select a programme number to be skipped with the **▲ / ▼** or **◀ / ▶** button.

Press the **BLUE** button. The skipped programme turns to blue.

Press the **BLUE** button again to release the skipped programme.

When a programme number is skipped it means that you will be unable to select it using the **▲ / ▼** button during normal TV viewing. If you want to select the skipped programme, directly enter the programme number with the **NUMBER** buttons or select it in the programme edit or table menu.

Repeatedly press the **MENU** button to return to normal TV viewing.

**1**

#### Displaying programme table

Press the **LIST** button to display the **Programme table** menu. The programme table appears on the screen. One programme table contains ten programmes as below.

You may find some blue programmes. They have been set up to be skipped by auto programming or in the programme edit mode. Some programmes with the channel number shown in the programme table indicate there is no station name assigned.

**2**

#### Selecting a programme in the programme table

Select a programme with the **▲ / ▼** or **◀ / ▶** button. Then press the **OK** button. The set switches to the chosen programme number.

**3**

#### Paging through a programme table

There are 10 programme table pages which contain 100 programmes. Pressing the **▲ / ▼** or **◀ / ▶** button repeatedly turns the pages.

Repeatedly press the **MENU** button to return to normal TV viewing.

# Picture adjustment

1

## CSM (Colour Status Memory)

To initialize values (reset to default settings), select the **Normal** option.

Press the **MENU** button and then ▲ / ▼ button to select the PICTURE menu.

Press the ► button and then ▲ / ▼ button to select **CSM**.

Press the ► button and then ▲ / ▼ button to select the desired colour temperature.

Repeatedly press the **MENU** button to return to normal TV viewing.

You can adjust red, green, or blue to any colour temperature you prefer.

 
 
Press the **MENU** button and then use ▲ / ▼ button to select the PICTURE menu.

Press the ► button and then use ▲ / ▼ button to select **CSM**.

Press the ► button and then use ▲ / ▼ button to select **User**.

Press the ► button and then use ▲ / ▼ button to make appropriate adjustments.

Repeatedly press the **MENU** button to return to normal TV viewing.

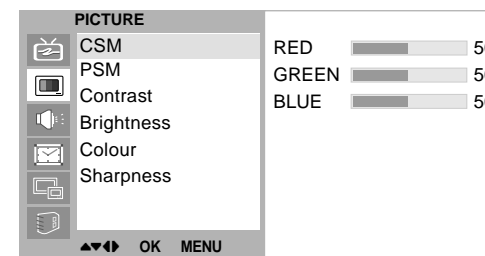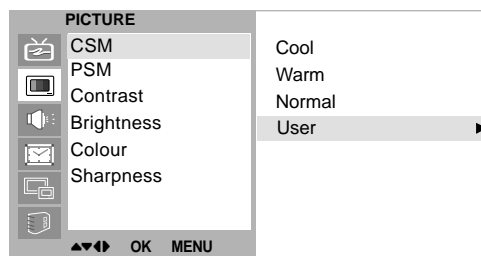

# Picture adjustment

2

## PSM (Picture Status Memory)

 
 
Press the **MENU** button and then use ▲ / ▼ button to select the PICTURE menu.

Press the ► button and then use ▲ / ▼ button to select **PSM**.

Press the ► button and then use ▲ / ▼ button to select a picture setting on the **PSM** pull-down menu.

Repeatedly press the **MENU** button to return to normal TV viewing.

You can also recall a desired picture (**Dynamic**, **Standard**, **Mild**, **Game** or **User**) with **PSM** button on the remote control. The picture **Dynamic**, **Standard**, **Mild**, **Game** are programmed for good picture reproduction at the factory and cannot be changed.

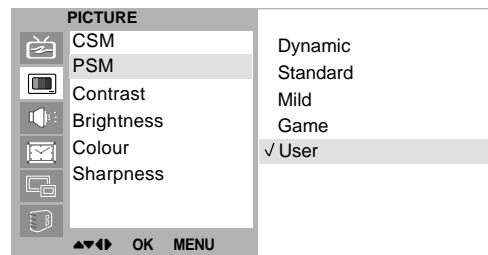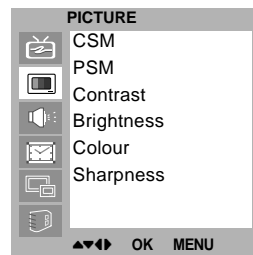

3

## Manual Picture Control

Press the **MENU** button and then use ▲ / ▼ button to select the PICTURE menu.

Press the ► button and then use ▲ / ▼ button to select the desired picture option.

Press the ► button and then use ◀ / ▶ button to make appropriate adjustments.

You can adjust picture contrast, brightness, colour, sharpness and tint (NTSC input only) to the levels you prefer.



# Picture adjustment

## Picture Format

 
### 4

#### Picture format

You can watch TV in various picture formats; 16:9, 14:9, 4:3, ZOOM, PANORAMA, AUTO. Repeatedly press the **ARC** button to select your desired picture format.

1. Press the **ARC** button to select a desired picture format.

- Each press of **ARC** button changes the screen display as shown below.
- You can also select 16:9, 14:9, 4:3, ZOOM, PANORAMA, AUTO in the SETUP menu.
- You can only select 14:9, ZOOM, PANORAMA, AUTO in TV, AV1, AV2, S-VIDEO, COMPONENT [480i] mode only.

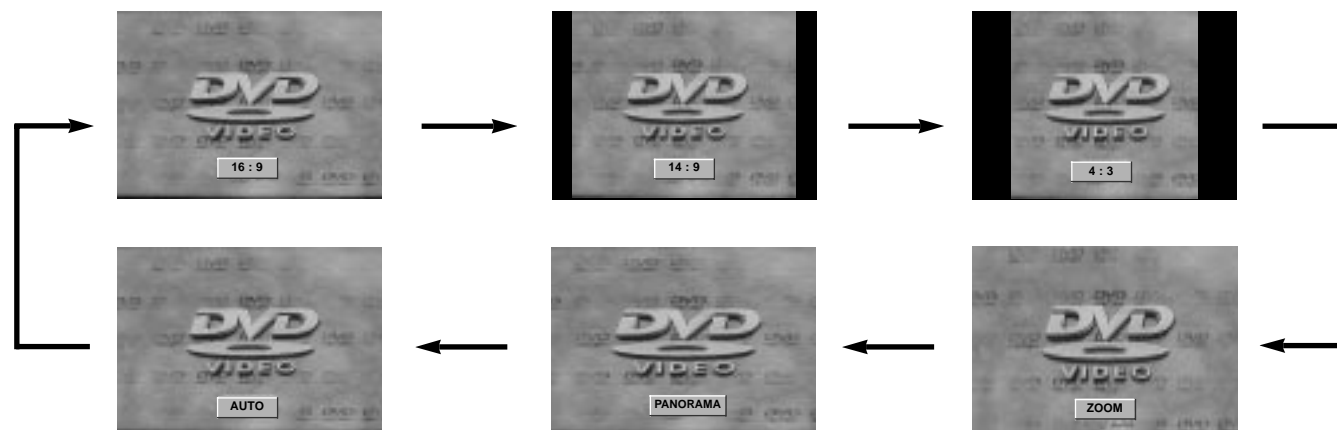

# Sound adjustment

1

 
## SSM (Sound Status Memory)

Press the **MENU** button and then use **▲ / ▼** button to select the **SOUND** menu.

Press the **►** button and then use **▲ / ▼** button to select **SSM**.


Press the **►** button and then use **▲ / ▼** button to select a sound setting on the **SSM** pull-down menu.

Repeatedly press the **MENU** button to return to normal TV viewing.

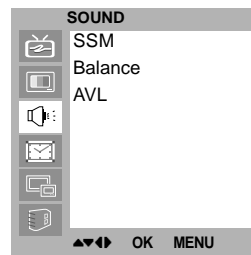


### Sound Frequency Adjustment

 - Press the **►** button in **User**.
- Select a sound band by pressing the **◀ / ▶** button.
- Make appropriate sound level with the **▲ / ▼** button.
- Press the **OK** button to store it for the sound **User**.

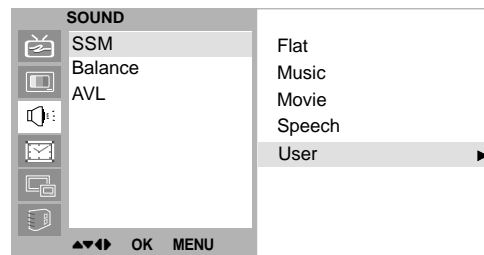

 You can also recall a desired sound (**Flat**, **Music**, **Movie**, **Speech** or **User**) with **SSM** button on the remote control. The sound **Flat**, **Music**, **Movie** and **Speech** are programmed for good sound reproduction at the factory and cannot be changed.

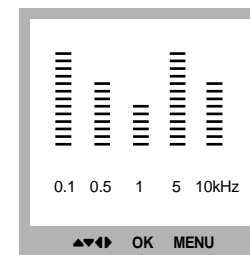

# Sound adjustment

2

 
## Balance

Press the **MENU** button and then use ▲ / ▼ button to select the SOUND menu.

Press the ► button and then use ▲ / ▼ button to select the desired sound item.

Press the ► button and then use ◀ / ▶ button to make appropriate adjustments.

Repeatedly press the **MENU** button to return to normal TV viewing.

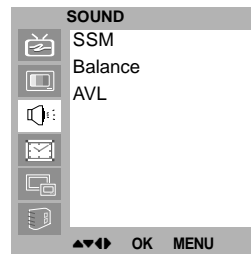

3

## AVL (Auto Volume Leveler)

 
 
Press the **MENU** button and then use ▲ / ▼ button to select the SOUND menu.

Press the ► button and then use ▲ / ▼ button to select **AVL**.

Press the ► button and then use ▲ / ▼ button to select **On** or **Off**.

Repeatedly press the **MENU** button to return to normal TV viewing.

This feature maintains an equal volume level; even if you change channels.

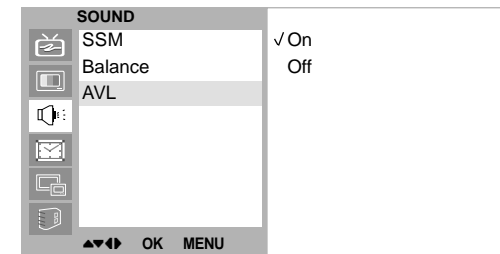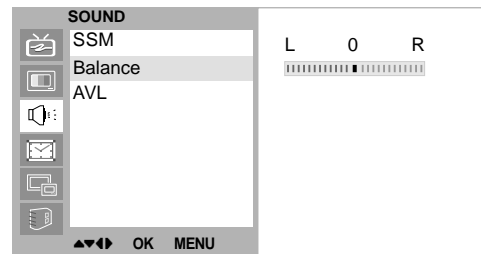



## 4

**Stereo/Dual/NICAM reception**

In AV mode, you can select output sound for the left and right loudspeakers.  
Repeatedly press the **I/II** button to select the sound output.

**L+R** : Audio signal from audio L input is sent to left loud-speaker and audio signal from audio R input is sent to right loudspeaker.

**L+L** : Audio signal from audio L input is sent to left and right loudspeakers.

**R+R** : Audio signal from audio R input is sent to left and right loud-speakers.

**Mono sound selection**

In stereo reception if the stereo signal is weak, you can switch to mono by pressing the **I/II** button twice. In mono reception the depth of sound is improved. To switch back to stereo, press the **I/II** button twice again.

**Language selection for dual language broadcast**

If a programme received in two languages (dual language), you can switch to **DUAL I**, **DUAL II** or **DUAL I+II** by pressing the **I/II** button repeatedly.

**DUAL I** sends the primary broadcast language to the loudspeakers.

**DUAL II** sends the secondary broadcast language to the loudspeakers.

**DUAL I+II** sends a separate language to each loudspeaker.

If your set is equipped with the receiver for NICAM reception, the high quality NICAM (Near Instantaneous Companding Audio Multiplex) digital sound can be received.

Sound output can be selected according to the type of received broadcast as follows by pressing the **I/II** button repeatedly.

When NICAM mono is received, you can select **NICAM MONO** or FM MONO.

When NICAM stereo is received, you can select **NICAM STEREO** or FM MONO. If the stereo signal is weak, switch to FM mono.

When NICAM dual is received, you can select **NICAM DUAL I**, **NICAM DUAL II** or **NICAM DUAL I+II** or **MONO**. When FM mono is selected the display **MONO** appears on the screen.

# Time Menu

1

## Clock

You must set the time correctly before using on/off time function.

 
 
Press the **MENU** button and then ▲ / ▼ button to select the TIME menu.

Press the ► button and then ▲ / ▼ button to select **Clock**.

Press the ► button and then ▲ / ▼ button to adjust the hour.

Press the ► button and then ▲ / ▼ button to adjust the minute.

Press the **MENU** or **OK** button to save.

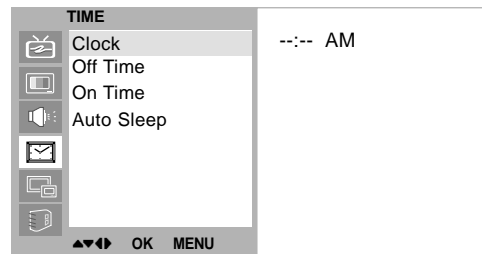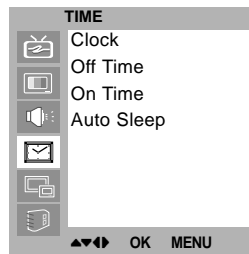

## 2

**On/Off Time**

The off timer automatically switches the set to standby at the preset time.

Press the **MENU** button and then **▲ / ▼** button to select the TIME menu.

Press the **▶** button and then **▲ / ▼** button to select **Off Time** or **On Time**.

Press the **▶** button and then **▲ / ▼** button to select **On**.

To cancel **Off/On Time** function, press the **▲ / ▼** button to select **Off**.

Press the **▶** button and then **▲ / ▼** button to adjust the hour.

 
Press the **▶** button and then **▲ / ▼** button to adjust the minute.

**Only On time function;** Press the **▶** button and then **▲ / ▼** button to adjust volume level and programe number.

Press the **MENU** or **OK** to save.

**Note :**

- a. In the event of power interruption (disconnection or power failure), the clock must be reset.
- b. Two hours after the set is switched on by the on time function it will automatically switch back to standby mode unless a button has been pressed.
- c. Once the on or off time is set, these functions operate daily at the preset time.
- d. Off Timer function overrides On Timer function if they are set to the same time.
- e. The set must be in standby mode for the On Timer to work.

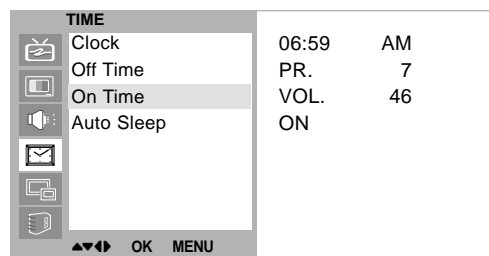

# Time Menu

3

## Auto sleep

 
If you select **On** on the **Auto Sleep** menu, the set will automatically switch itself to standby mode approximately ten minutes after a TV station stops broadcasting.

Press the **MENU** button and then ▲ / ▼ button to select the TIME menu.

Press the ► button and then ▲ / ▼ button to select **Auto Sleep**.

Press the ► button and then ▲ / ▼ button to select **On** or **Off**.

Press the **MENU** or **OK** button to save.

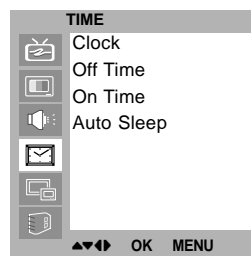


4

## Sleep timer

 You don't have to remember to switch the set off before you go to sleep. The sleep timer automatically switches the set to standby after the preset time has elapsed. Press the **SLEEP** button to select the number of minutes. The display '--- min' will appear on the screen, followed by **10, 20, 30, 60, 90, 120, 180** and **240**. The timer begins to count down from the number of minutes selected.

### Note :

- To view the remaining sleep time, press the **SLEEP** button once.
- To cancel the sleep time, repeatedly press the **SLEEP** button until the display '--- min' appears.
- When you switch the set off, the set releases the preset sleep time.

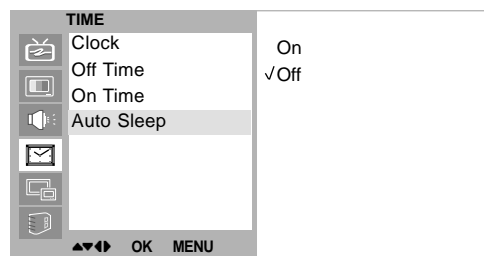

## PC Setup

You can adjust horizontal/vertical position, clock, phase, and auto-configure, reset as you prefer.

Press the **MENU** button and then **▲ / ▼** button to select the SETUP menu.

Press the **►** button and then **▲ / ▼** button to select the desired picture item.

Press the **◀ / ▶** button to make appropriate adjustments.

### H-Position / V-Position

This function is to adjust picture to left/right and up/down as you prefer.

### Clock

This function is to minimize any vertical bars or stripes visible on the screen background. And the horizontal screen size will also change.

### Phase

### WXGA (or VGA (Only RGB/HDMI mode))

a : When the set is inputted WXGA signal, select the desired WXGA resolution.

b : When the set is inputted HDMI-480p signal in VGA mode, select 480p on the SETUP menu.

This function allows you to remove any horizontal noise and clear or sharpen the image of characters.

### Auto-configure

 
 
This function is for the automatic adjustment of the screen position, clock and phase. The displayed image will disappear for a few seconds while the Auto-configuration is in progress.

### Reset

This function allows you to return to the good picture reproduction programmed at the factory and cannot be changed.

**Note** : Some signal from some graphics boards may not function properly. If the results are unsatisfactory, adjust your monitor's position, clock and phase manually.

Press the **OK** button to store it for the PC monitor picture. Press the **EXIT** button to return to PC mode.

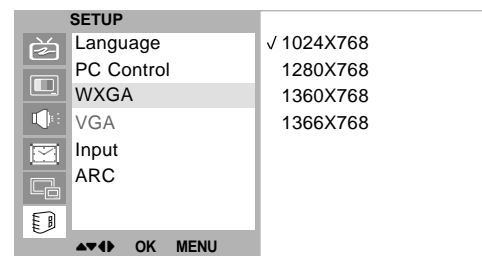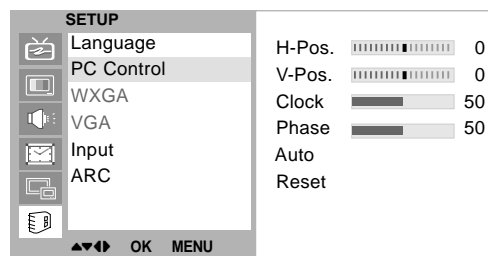

# PIP (Picture-in-Picture) Feature

 
- PIP lets you view 2 different inputs (sources) on your monitor screen at the same time. One source will be large, and the other source will show a smaller inset image.

1

## Watching PIP

Press the **PIP** button to show the sub picture.

- Each press of **PIP** button changes the screen display as shown below.

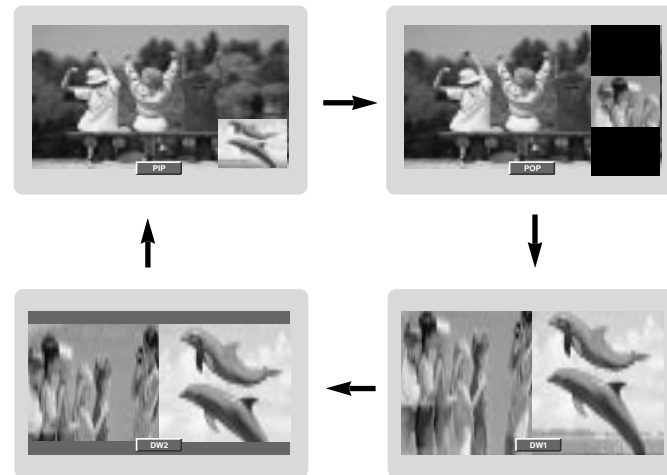


3

## Moving the PIP

 Press the **PIP POSITION** button.

Press the **PIP POSITION** button repeatedly until desired position is achieved. The sub pictures move clockwise.

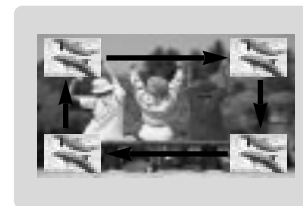

2

## PIP Audio Input

 
PIP mode - main and sub picture audio select.

Press the **MENU** button and then **▲ / ▼** button to select the PIP menu.

Press the **▶** button and then **▲ / ▼** button to select **Audio Input**.

Press the **▶** button and then **▲ / ▼** button to select **Main** or **Sub**.

Repeatedly press the **MENU** button to return to normal TV viewing.

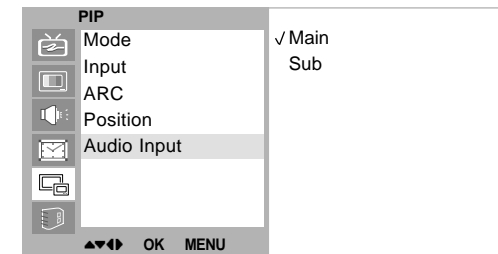


# PIP (Picture-in-Picture) Feature

4

## Swapping the PIP

 Press the **SWAP** button to exchange the main and sub pictures.

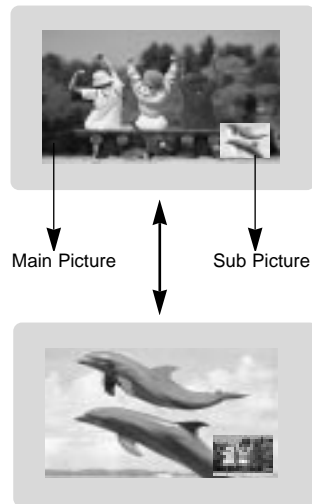

5

## Selecting a Input Signal Source for the PIP

Use the **PIP INPUT** button to select the input source for the sub picture.



6

## Programme selection for sub picture

Press the **PIP PR +/-** button. The selected programme number is displayed just below the programme number of main picture.

7

## Programme scan

This function enables you to search all the stored stations on 4 or 16 sub pictures and see your favourite station by exchanging the main and sub pictures.

Press the **SCAN** button repeatedly to select POP4/POP16.

The selected sub or main pictures search all the stored stations.

Press the **EXIT** button to switch off sub or main pictures.



Teletext (or TOP text) is an optional function, therefore only a set with the teletext system can receive the teletext broadcast.

Teletext is a free service broadcast by most TV stations which gives up-to-the-minute information on news, weather, television programmes, share prices and many other topics.

The teletext decoder of this TV can support the SIMPLE, TOP and FASTEXT systems. SIMPLE (standard teletext) consists of a number of pages which are selected by directly entering the corresponding page number. TOP and FASTEXT are more modern methods allowing quick and easy selection of teletext information.

## Switch on/off


Press the **TEXT** button to switch to teletext. The initial page or last page appears on the screen. Two page numbers, TV station name, date and time are displayed on the screen headline. The first page number indicates your selection, while the second shows the current page displayed. Press the **TEXT** button to switch off teletext. The previous mode reappears.

## SIMPLE text

### Page selection

1. Enter the desired page number as a three digit number with the **NUMBER** buttons. If during selection you press a wrong number, you must complete the three digit number and then re-enter the correct page number.
2. The **▲ / ▼** button can be used to select the preceding or following page.

### Programming a colour button in LIST mode

If the TV is in SIMPLE text, TOP text or FASTEXT mode,  press the button to switch to LIST mode.

Four teletext page numbers of your choice can be colour coded and easily selected by pressing the corresponding coloured button on the remote control handset.

1. Press a coloured button.
2. Using the **NUMBER** buttons, select the page you wish to programme.
3. Press the **OK** button. The selected page is stored as the selected page number, blinking once to confirm this. From now on, you can select this page with the same coloured button.
4. The three other coloured buttons are programmed in this way.

## TOP text (option)

The user guide displays four fields-red, green, yellow and blue at the bottom of the screen. The yellow field denotes the next group and the blue field indicates the next block.

### Block / group / page selection

1. With the blue button you can progress from block to block.
2. Use the yellow button to proceed to the next group with automatic overflow to the next block.
3. With the green button you can proceed to the next existing page with automatic overflow to the next group. Alternatively the **▲** button can be used.
4. The red button permits to return to previous selection. Alternatively the **▼** button can be used.

### Direct page selection



Corresponding to the SIMPLE teletext mode, you can select a page by entering it as a three digit number using the **NUMBER** buttons in TOP mode.



## FASTEXT

The teletext pages are colour coded along the bottom of the screen and are selected by pressing the corresponding coloured button.

### Page selection

1. Press the  button to select the index page.
2. You can select the pages which are colour coded along the bottom line with the same coloured buttons.
3. Corresponding to the SIMPLE teletext mode, you can select a page by entering its three digit page number with the NUMBER buttons in FASTEXT mode.
4. The  button can be used to select the preceding or following page.

## Special teletext functions

### REVEAL

Press this button to display concealed information, such as solutions of riddles or puzzles.

Press this button again to remove the information from the display.

### SIZE



Selects double height text.

Press this button to enlarge the top half of the page.

Press this button again to enlarge the bottom half of the page.

Press this button again to return to the normal display.

### UPDATE

Displays the TV picture on the screen while waiting for the new teletext page. The display  will appear at the top left hand corner of the screen. When the updated page is available then display  will change to the page num-

ber.

Press this button to view the updated teletext page.

### HOLD

Stops the automatic page change which will occur if a teletext page consists of 2 or more sub pages. The number of sub pages and the sub page displayed is, usually, shown on the screen below the time. When this button is pressed the stop symbol is displayed at the top left-hand corner of the screen and the automatic page change is inhibited.


To continue press this button again.

### MIX

Displays the teletext pages superimposed on the TV picture.

To switch the TV picture off press this button again.

### TIME

When viewing a TV programme, press this button to display the time at the top right hand corner of the screen. Press this button again to remove the display. In the teletext mode, press this button to select a sub page number. The sub page number is displayed at the bottom of the screen. To hold or change the sub page, press the RED / GREEN,  or NUMBER buttons.

Press this button again to exit this function.

# Displayable Monitor Specification

RGB Mode / HDMI Mode

MODE	Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)
DOS	640X350	31.5	70.0
	720X400	31.5	70.0
		37.9	85.0
VGA	640X480	31.5	60.0
		37.8	72.0
		37.5	75.0
		43.2	85.0
SVGA	800X600	35.1	56.0
		37.9	60.0
		48.0	72.0
		46.9	75.0
		53.7	85.0
XGA	1024X768	48.4	60.0
		56.4	70.0
		60.0	75.0
		60.0	85.0
SXGA	1280X1024	63.9	60.0
		75.0	70.0
		79.9	75.0
		91.1	85.0
WXGA	1280X768	47.7	60.0
		60.1	75.0
		68.5	85.0
	1360X768	49.0	60.0
	1366X768	49.0	60.0
UXGA	1600X1200	75.0	60.0
MAC	832X624	49.7	75.0

(Synchronization input form : separate)

## Note:

 
- If the set is cold, there may be a small "flicker" when the set is switched on. This is normal, there is nothing wrong with the set.
- If possible, use the VESA 1,024x768@60Hz video mode to obtain the best image quality for your LCD monitor. If used to PC vertical frequency 85Hz, some noise can be seen when PIP is on. In this case, set the PC vertical frequency to 60Hz. The set has been pre-adjusted to the mode VESA 1,024x768@60Hz.
- Some dot defects may appear on the screen, like Red, Green or Blue spots. However, this will have no impact or effect on the monitor performance.
- Do not press the LCD screen with your finger for a long time as this may produce some temporary distortion effects on the screen.
- When the PC screen appears on the set, a message may appear on the screen, and the message will differ according to the Window system version (Win98, 2000). If a message appears click "Next" until the message finishes.
- If the message "**Out Of Range**" appears on the screen, adjust the PC as in the 'Displayable Monitor Specification' section.
- Supportable resolution may vary as per graphic card.

# Troubleshooting

## Check list


### Symptoms

- No picture, no sound
- Sound OK, poor picture
- Picture OK, poor sound
- Picture blurred
- Lines or streaks in picture
- Poor reception on some channels
- No colour
- Poor colour
- Remote control does not work
- Incorrect position
- Vertical bars or stripes on background
- Horizontal noise
- Signal Cable message appears

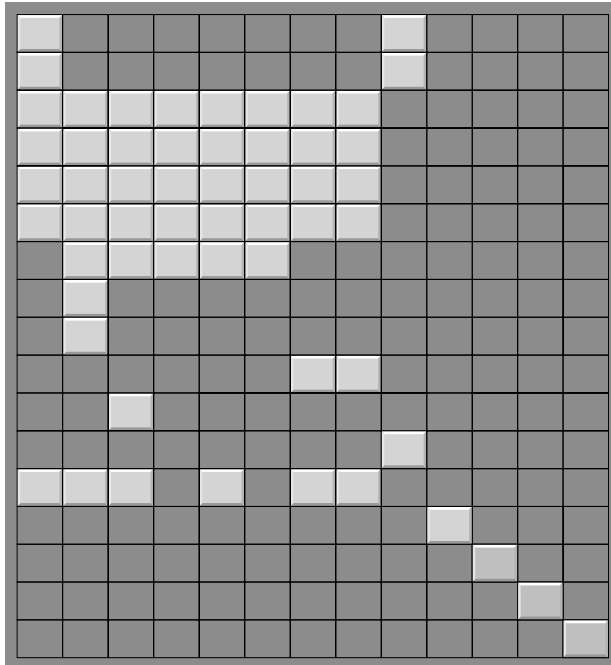

### Check these items and try to adjust these

 - The mains plug-(plugged in and switched on)
- Is the TV switched on
- Try another channel (weak signal)
- Check aerial (plugged into TV?)
- Check aerial (broken lead?)
- Check aerial
- Check for local interference
- Adjust contrast
- Adjust brightness
- Adjust colour
- Adjust volume
- Check the batteries in remote control
- Check Audio/Video sockets (VCR only)
- Auto-configure or adjust the H/V position
- Auto-configure or adjust Clock
- Auto-configure or adjust Clock Phase
- Is the Signal Cable connected or loose

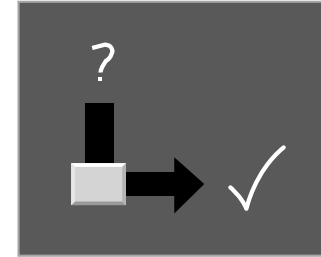

**[www.yuraku.com.sg](http://www.yuraku.com.sg)**