

YURAKU

Yur.Photo Gallery 7B

**Yur-PFA70BWA
User manual**



Connecting diagram



SAFETY PRECAUTIONS

- Only use the adaptor delivered with the box.
- Disconnect the DC adaptor before cleaning the photo viewer.
- Keep the frame away from strong magnets, heat sources, direct sunlight and excessive dust.

Only clean the cover, acrylic body, LCD screen and buttons with a soft wet towel, Do NOT use a rough towel, sprays or chemical cleaning equipment like alcohol, benzene, etc.

Many Thanks for selecting one of our Yuraku products.

Enjoy the beautiful features of the latest digital display technology.

Please read this user manual before installing, setting up or using the product.

After reading these instructions, you will be able to use it in minutes.



WEEE (Waste Electrical and Electronic Equipment Directive)

If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



Introduction

View your digital photo images on the vivid 7" Yur.Gallery 7BA Picture Frame. The 16:9 ratios provide you wide versatility for different digital camera photo formats. Comes with memory card slot for four different memory cards, giving you more flexibility with the image sources.

Features:

- Full 7" Analogue Picture Frame with 16:9 wide ratio
- Reads JPEG digital photo format
- Reads 4 memory cards (SD / MS / MMC / XD)
- Portrait and Landscape positioning
- Slide show function
- Adjustable stand with wall mounting features

Easy use:

Easy steps to usage

- 1) Remove the memory card from your camera
- 2) Connect the power supply by using the AC-adaptor
- 3) Put the memory card in the slot with the front side facing the unit
- 4) View your pictures

Operations:

PLAY MODE

Press **Play/Mode** once to enter the Slide Show Mode. The photo transition is based on the settings selected.

Press **Play/Mode** again to enter the **Browse** mode. A single image will be displayed. Use the **PREV** and **NEXT** buttons to select a photo.

Press **Play/Mode** again to enter the **Overview** mode. Thumbnail images of the photos will be shown. Use the **PREV** and **NEXT** buttons to navigate through the thumbnails.

Press **MENU** to enter the main menu.

COPYING PHOTOS (images)

You can copy approximately 15 photo images into the internal memory of the Digital Photo Frame. To copy images from an inserted memory card, locate and select the photo and press the **UP/COPY/DELETE** button. You will be asked if you want to copy the photo image. Select **YES** and press the **PLAY/MODE** button to confirm.

Note: You can rotate photo by pressing the **DOWN/ROTATE** button repeatedly while the photo is displayed. Rotated photos are copied to memory in their rotated position.

DELETING PHOTOS

To delete photos from the internal memory, please remove all external memory cards or USB (flash) disks. Locate the photo you want to delete and press the **UP/COPY/DELETE** button. You will be asked if you want to delete the photo. Select **YES** and press **PLAY/MODE** to confirm. The photo is now deleted from the internal memory.

Note: The **DELETE** function only works for the internal memory and does not work for the inserted memory cards and USB (flash) disks.

SETTINGS

Press **MENU**, the main menu will appear.


Select **SETTINGS** and press the **PLAY/MODE**, the **SETUP** menu will appear. Use the **PREV**, **NEXT** and **DOWN** buttons to highlight a setting or option.

Press the **PLAY/MODE** button to select a highlighted option.

Options to be selected:

- BRIGHTNESS (-3 to +3)
- SLIDE SHOW TIME (5, 10 or 30 seconds interval)
- OSD LANG (Select your menu language of choice)
- DEFAULT (Reset, return to factory settings)
- EXIT SETUP (Return to main menu)

Key Functions: **BUTTONS AND SLOTS**

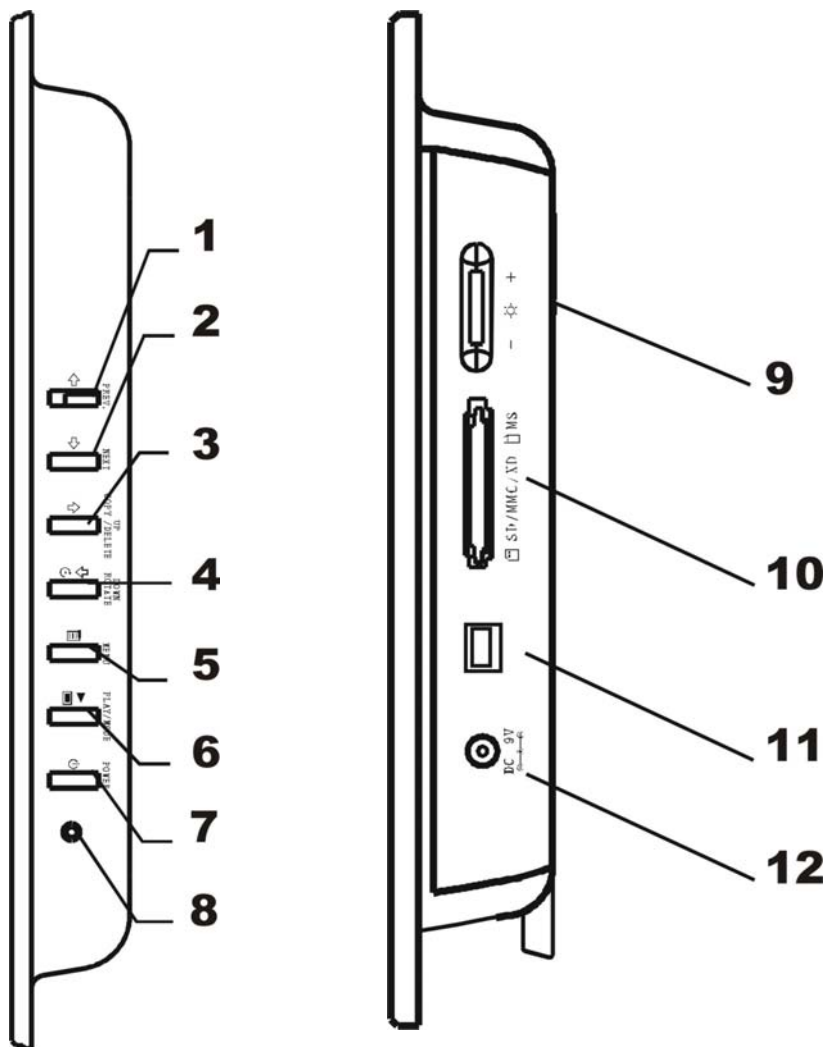


]

Description:

1. **PREVIOUS:** Press this button to view previous picture or to navigate.
2. **NEXT:** Press this button to view next photo or to navigate.
3. **UP/COPY/DELETE:** Press to navigate copy or delete a photo.
4. **DOWN/ROTATE:** Press to rotate a photo or to navigate.
5. **MENU:** Press to access the main menu.
6. **PLAY/MODE :** Press to confirm/select functions
7. **POWER:** Press this button to power ON and power OFF the unit.
8. **POWER LED**
9. **BRIGHTNESS:** Turn to adjust brightness.
10. **SD/MS/MMC/XD:** Insert a compatible memory card here.
11. **USB:** Insert a USB (flash) Disk here
12. **DC INPUT:** 9Vdc input connection.

HOW TO PLACE THE PHOTO FRAME

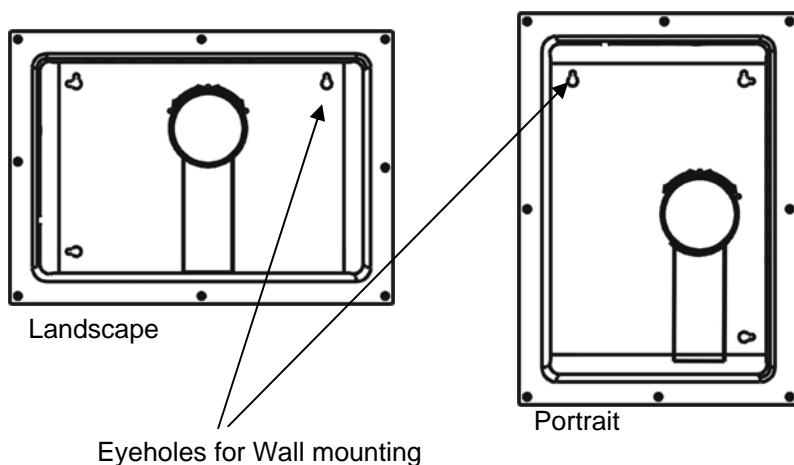

Specifications:

Features:	
Memory card support	SD/MMC/MS/XD
Measurements of panel	7inch (17.78 cm)
Resolution	480 x 234 pixels
Brightness	350cd/m2
Contrast	300:1
Viewing angle	60 / 60 / 50 / 40 (CR-10)
Response time	30ms
Screen measurement modus	16:9
Type File format support	JPEG
Picture measurements	5.0m pixels
Power source	9V DC
Temperature of use	5 ~ 35° Celsius
Storage Temperature	-30 ~ 75° Celsius
Color	White
Measurements	240 x 170 x 30mm
Weight	0.55kg

- end -